

Maintenance Instructions

for

HBC /ZDS

Warm Inspired Air Control Unit

There are no user serviceable parts in this system.

Maintenance will be strictly on a return to factory basis.

The IEC mains cable should be regularly inspected for damage and replaced by the user. The IEC mains cable and the IEC mains power inlet socket should be regularly inspected for damage and be tested by an electrician as part of the user's routine (e.g. annual) electrical appliance inspection schedule.

The heated breathing circuit controller is designed to be operated in a dry environment. If there is suspected ingress of water or other liquids, a return to factory for maintenance is recommended.

DarvallVet, A division of Advanced Anaesthesia Specialists

Unit 13, 46-48 Buffalo Road

Gladesville, NSW 2111 Australia

Tel: 61 (0) 298081844 | Fax: 61 (0) 298082866

Email: gcs@darvallvet.com